



- 1 OIL FILLER CAP, ENGINE
- 2 OIL DIP STICK, ENGINE
- 3 OIL DRAIN (WITH PUMP), ENGINE
- 4 OIL FILTER
- 5 WATER DRAIN, FRESH WATER
- 6 WATER FILLER CAP FRESH WATER
- 7 TIE BAR
- 8 WATER DRAIN CHARGE AIR COOLER, SEA WATER
- 9 WATER DRAIN HEAT EXCHANGER, SEAWATER
- 10 FUEL FILTER
- 11 AIR FILTER
- 12 LIFTING DEVICE 2x n 21, 0.83"
- 13 ECU UNIT (BULKHEAD MOUNTED)
- 14 OIL DIP STICK OUTBOARD DRIVE
- 15 OIL FILL OUTBOARD DRIVE
- 16 OIL DRAIN OUTBOARD DRIVE
- 17 AUTOMATIC FUSE, TRIM PUMP
- 18 AUTOMATIC FUSE, VOLTAGE CONVERTER
- 19 WATER INTAKE
- 20 AUX. STOP
- 21 FUSE, FUEL FEED PUMP
- 22 ECU CABLE HARNESS L-1.5M (5 FEET)
- 23 CCV FILTER
- 24 FUEL INLET CONNECTION FOR HOSE I.D. 9.5 (3.8")
- 25 FUEL RETURN CONNECTION FOR HOSE I.D. 9.5 (3.8")
- 26 SEA WATER FILTER
- 27 SERVO OIL RESERVOIR (BULKHEAD MOUNTED)
- 28 SHIFT ACTUATOR (BULKHEAD MOUNTED)
- 29 SHIFT CABLE

CENTRE OF GRAVITY  
 X SEE TEMPLATE 7745528  
 SCALE 1:5

INSTALLATION DRAWING  
 21687600  
 03

**VOLVO PENTA**