



SCALE 15

FOR TOLERANCES ON MEASURES PLEASE CONTACT VOLVO PENTA

SEPARATE VIEWS FOR FLYWHEEL HOUSING AND EXHAUST FLANGE ON SHEET 212)

POS	DESCRIPTION	X	Y	Z	NOTE
A	OIL FILLER CAP	260	592	-18	
B	OIL DRAIN PLUG x2	436	-276	131	M18
C	OIL DIPSTICK	190	430	314	
D	OIL FILTER	415	412	250	
E	FUEL INLET	-163	230	203	
F	FUEL RETURN	-181	194	228	
G	WATER IN FUEL CONNECTOR				
H	FUEL FILTER	284	490	258	
I	TO CHARGE AIR COOLER	545	272	-255	n 80 HOSE-CLAMP
J	FROM CHARGE AIR COOLER	627	524	-334	n 70 HOSE-CLAMP
K	EATS POWER SUPPLY 2-POLE (MANUAL)				
L	VODIA, 6-POLE CONNECTOR				
M	CAN, 8-POLE CONNECTOR				
N	AUX STOP BUTTON	533	299	395	
O	ENGINE HEATER (OPTION)	241	253	203	
P	EATS POWER SUPPLY 2-POLE (MANUAL)				
Q	EATS COM (MANUAL)				
R	EXHAUST OUTLET	327	272	-255	
S	WATER IN	642	60	288	
T	WATER OUT	710	524	221	
U	EATS COM (MANUAL)				
W	FROM ENGINE HEATER (EXTERNAL GUIDLINE)	599	564	190	M26x15
TP	CENTRE OF GRAVITY	278	146	-2	

ENGINE DIMENSIONING
 TAG 566-561VE
 DIMENSIONAL DRAWING
 21659685